
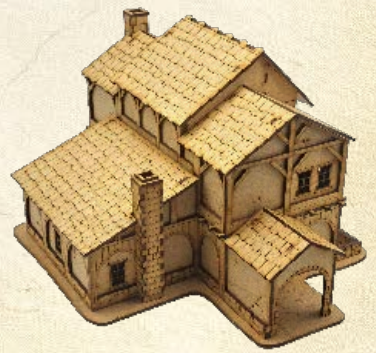


MEDIEVAL FANTASY COLLECTION

BURGOMEISTER'S MANOR

ASSEMBLY INSTRUCTIONS

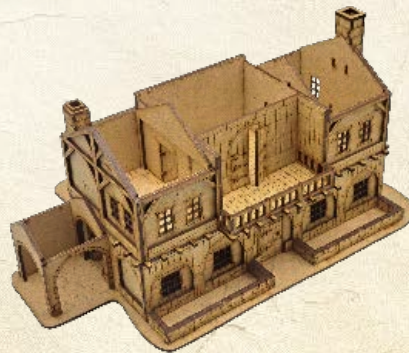

dryad-miniworlds.be

MED-005 / © DRYAD MiniWorlds 2025. All rights reserved. 100% made in Belgium.

BEFORE ASSEMBLING YOUR KIT, CAREFULLY READ THE FOLLOWING INSTRUCTIONS.

To assemble this kit, you will need several tools:

A modelling knife

Use the modelling knife to detach the pieces from their frame. Do not push them with your fingers or you might break the most fragile parts.

Sandpaper or a small wood file

Sand or file away any rough edges where the parts were attached to the panel.

Wood glue or liquid cyanoacrylate

Glue the pieces according to the assembly plan. Wood glue will take longer to dry than cyanoacrylate glue, but is easier to reposition in case of error.

When assembling this kit, make sure the pieces fit together properly before gluing them together.

You may find some of these icons in the assembly plan. They will provide you with additional information for your assembly.



Indicates the direction of gluing



Do not glue



Align



Important note



Construction stage



End of stage



Assembly alternatives

AVANT D'ASSEMBLER VOTRE KIT, LISEZ ATTENTIVEMENT LES INSTRUCTIONS SUIVANTES.

Pour assembler ce kit, vous aurez besoin de plusieurs outils :

Un couteau de modélisme

Utilisez le couteau de modélisme pour détacher les pièces de leur cadre. Ne poussez pas avec vos doigts car vous risqueriez de casser les pièces les plus fragiles.

Du papier abrasif ou une petite lime à bois

Poncez ou limez les aspérités, là où les pièces étaient attachées au panneau.

De la colle à bois ou cyanoacrylate liquide


Collez les pièces suivant le plan de montage. La colle à bois mettra plus de temps à sécher que la colle cyanoacrylate, mais est plus facilement repositionnable en cas d'erreur.

Lorsque vous assemblez ce kit, vérifiez avant de coller si les pièces s'emboîtent correctement.


Vous trouverez peut-être certaines de ces icônes dans le plan de montage. Elles vous fourniront des informations complémentaires pour votre assemblage.



Indique la direction du collage

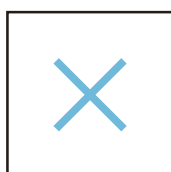


Ne pas coller

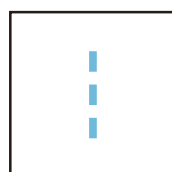

Aligner



Remarque importante

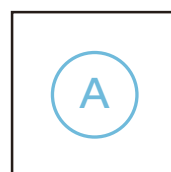





Etape de construction




Fin d'étape




Alternatives de montage

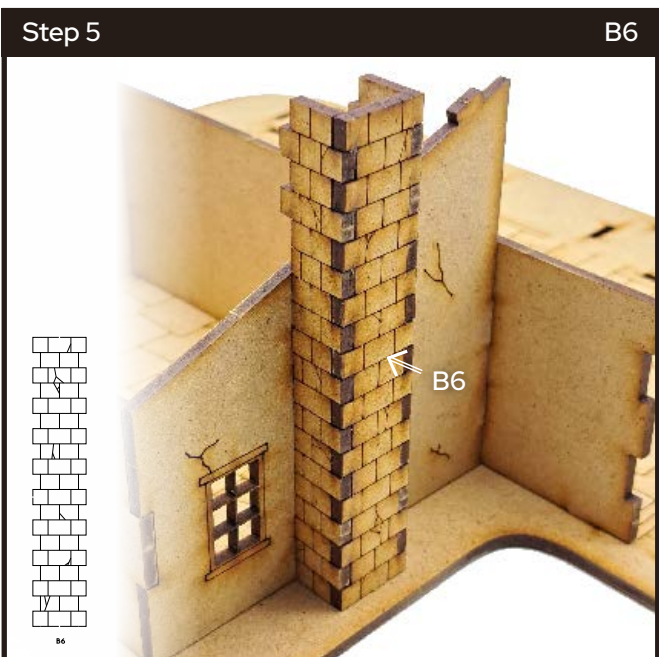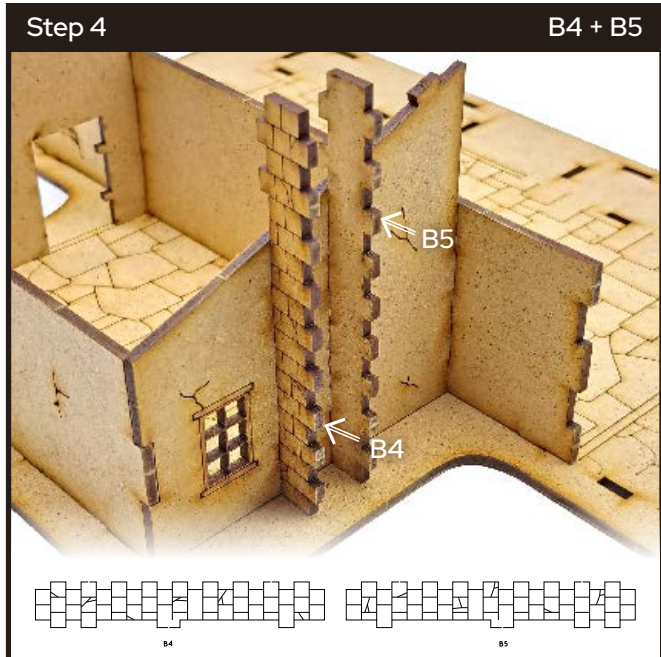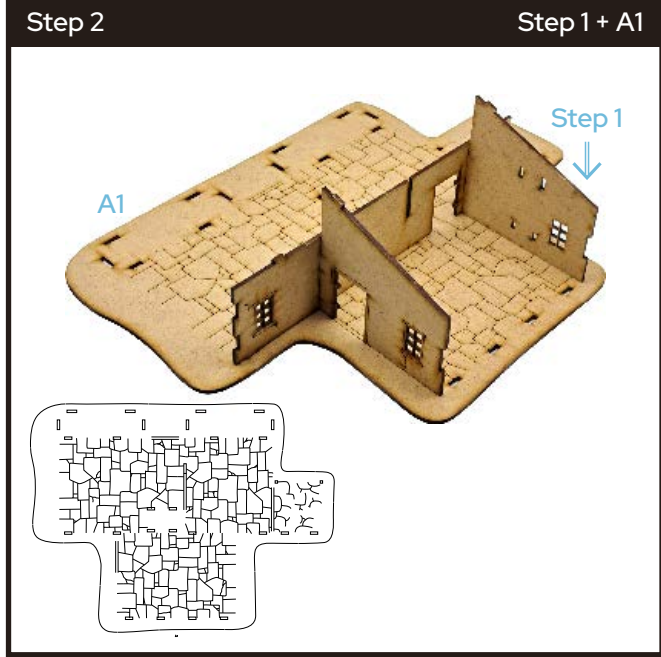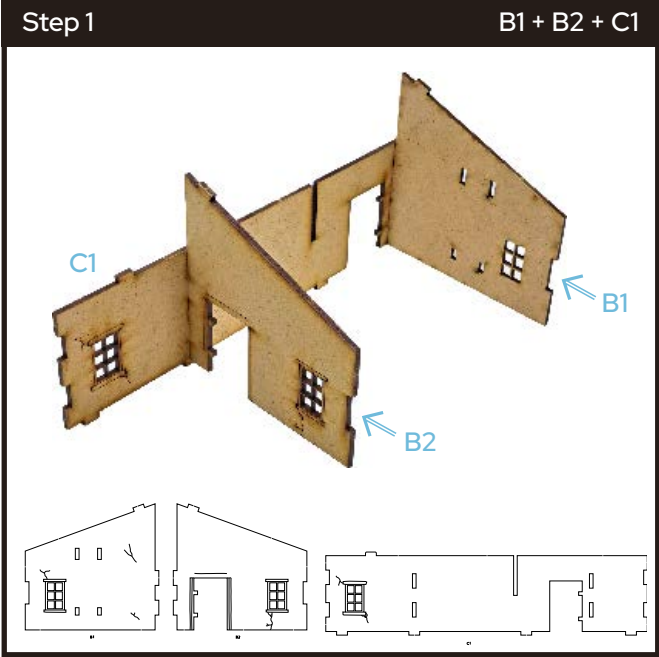

Step 7 B8 + B9

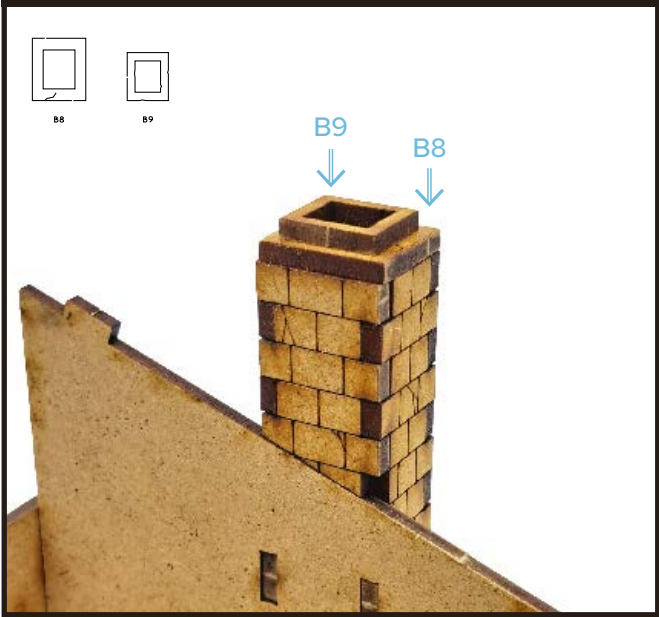


Step 8 B10

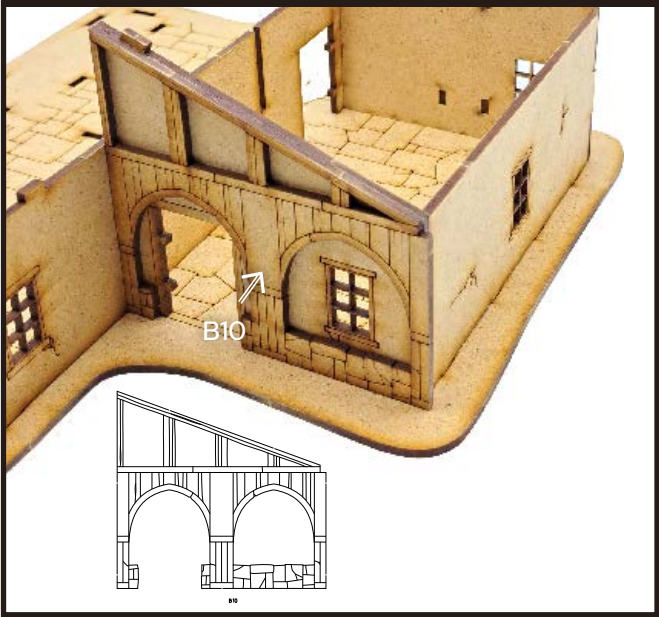


Step 9 B13




Step 10 B11 + B12

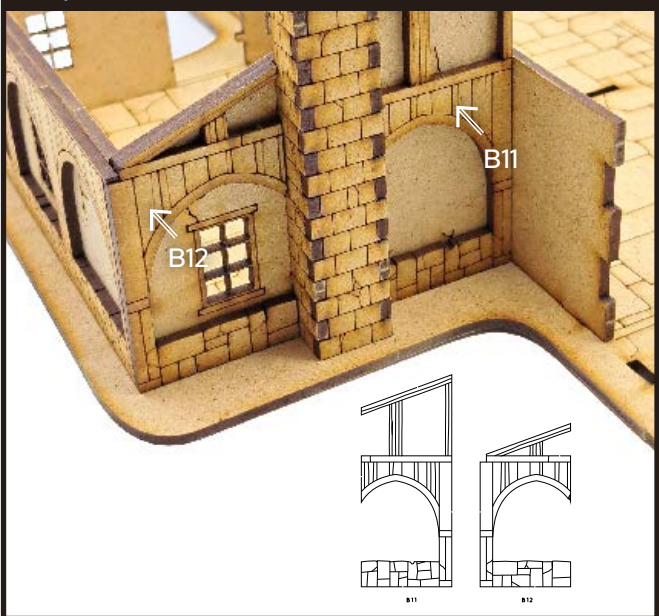

Step 11 B14

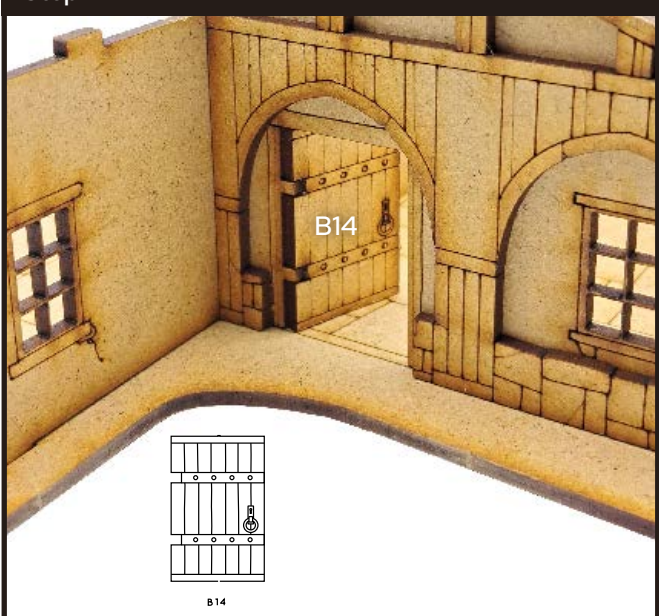


Step 12 C2

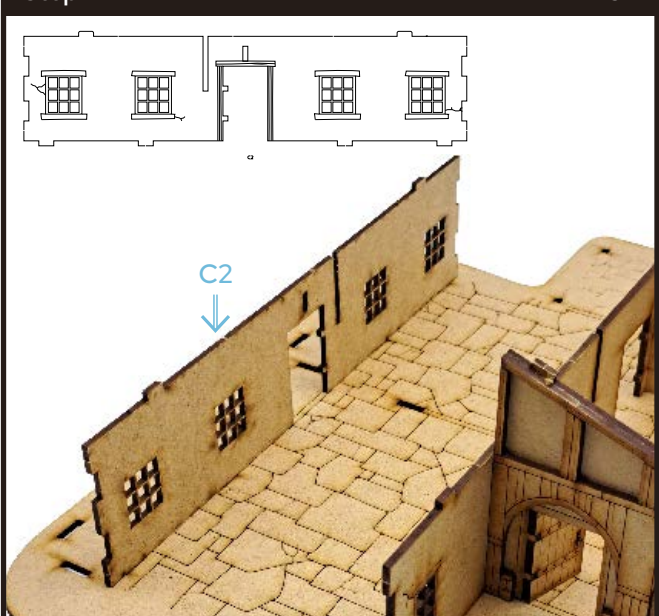


Step 13

C11

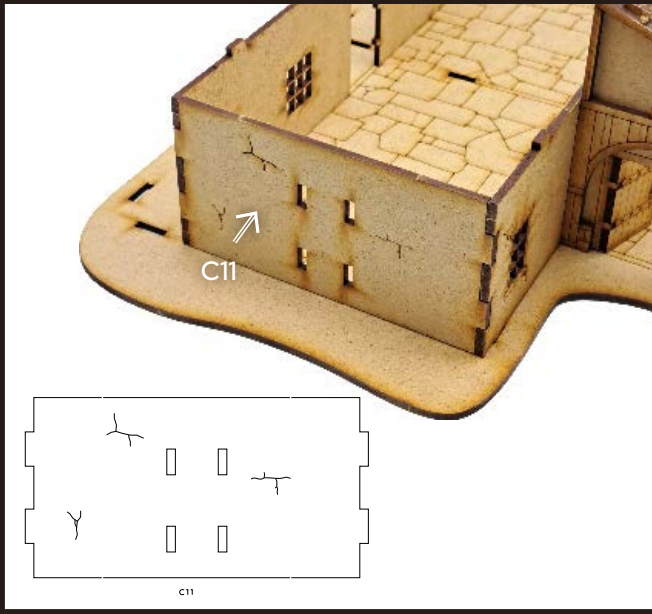


Step 14

D4 + D5 + D6

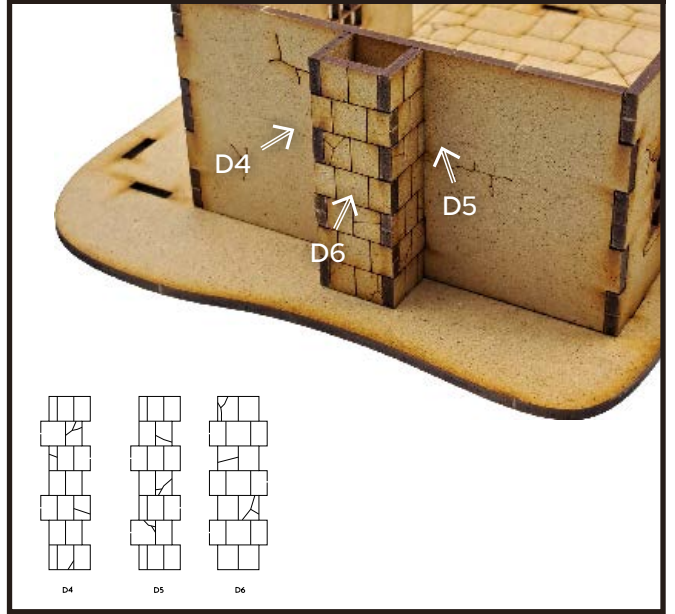


Step 15

C17 + C18

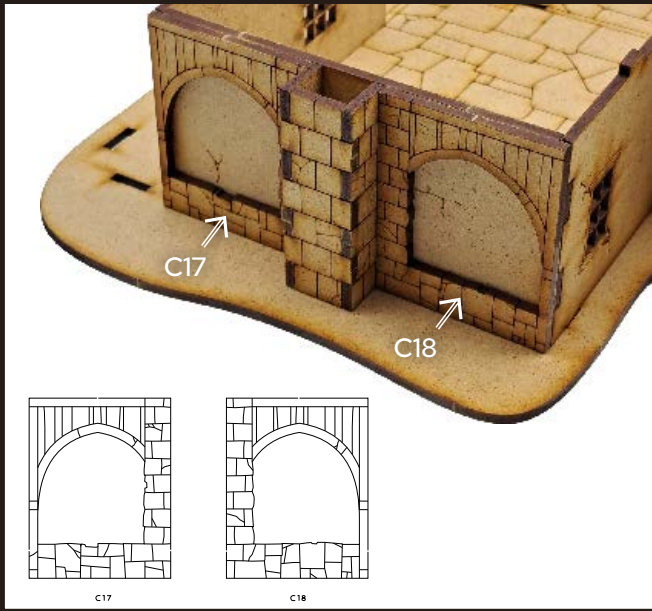


Step 16

D7

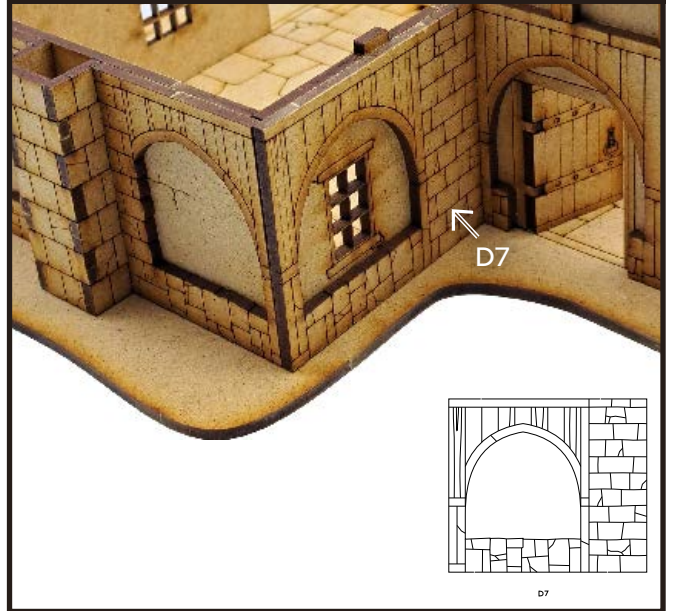


Step 17






C10


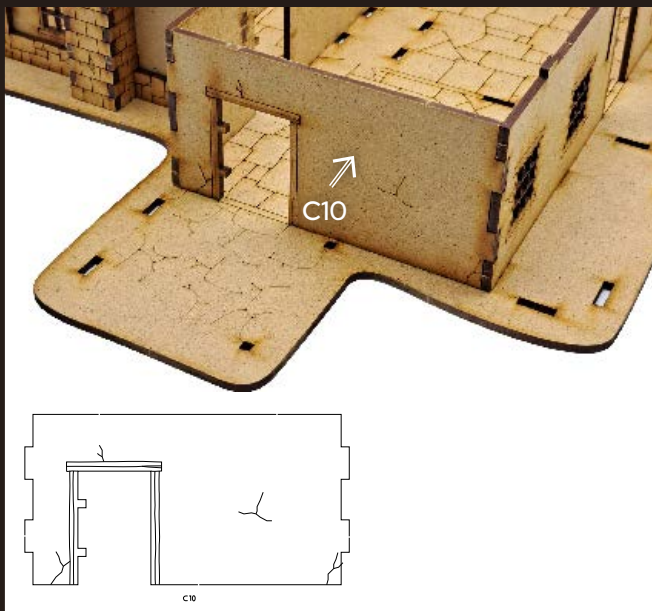


Step 18

G10 + G12

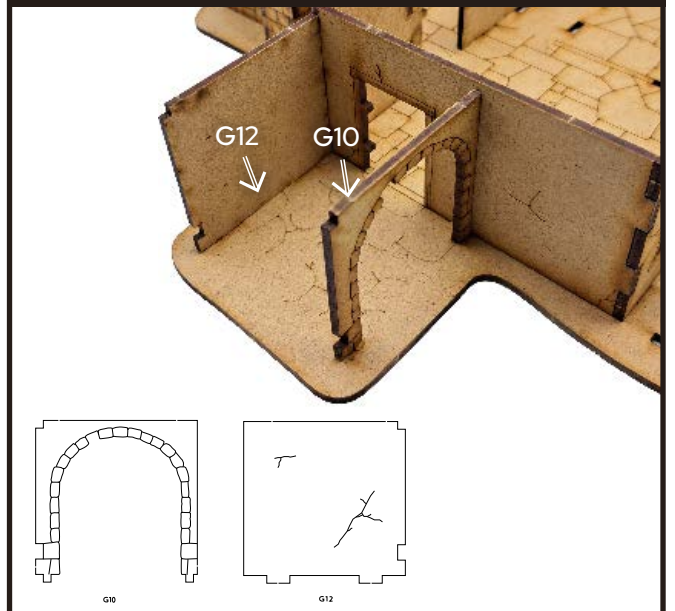

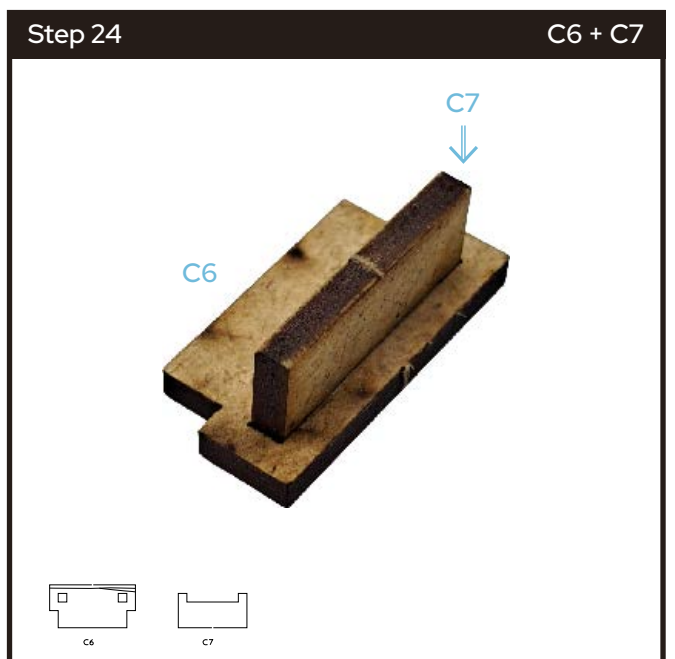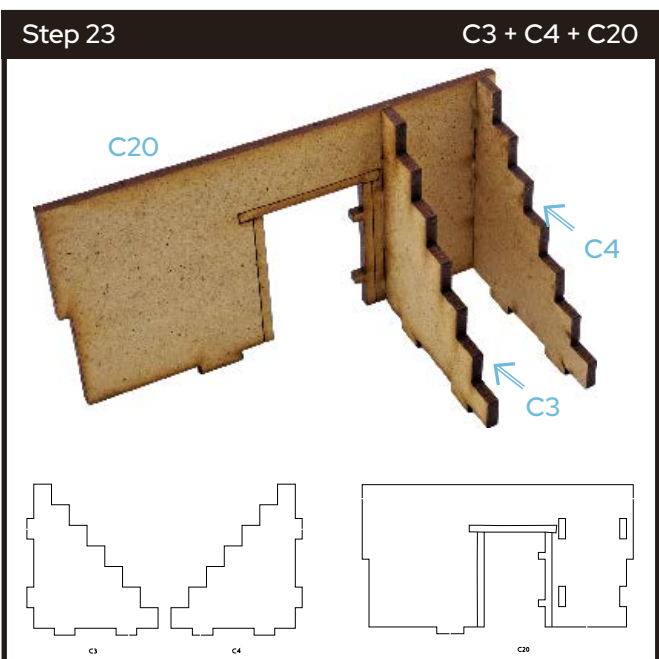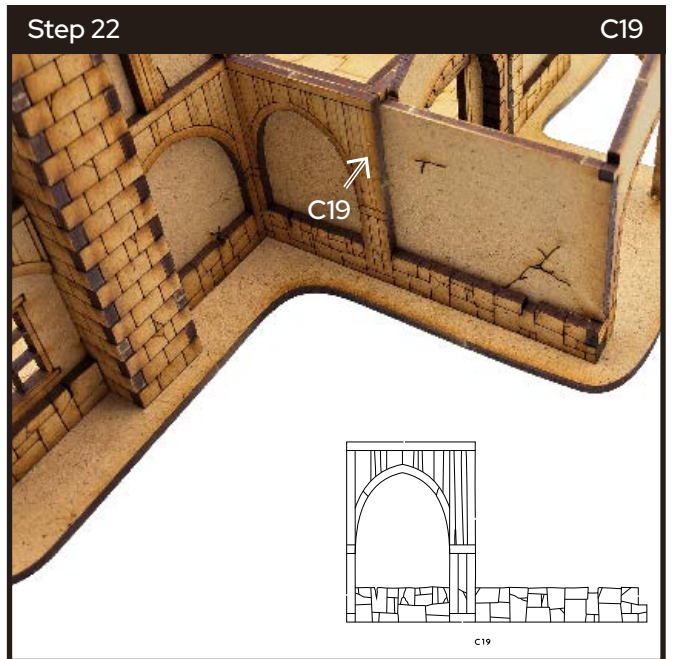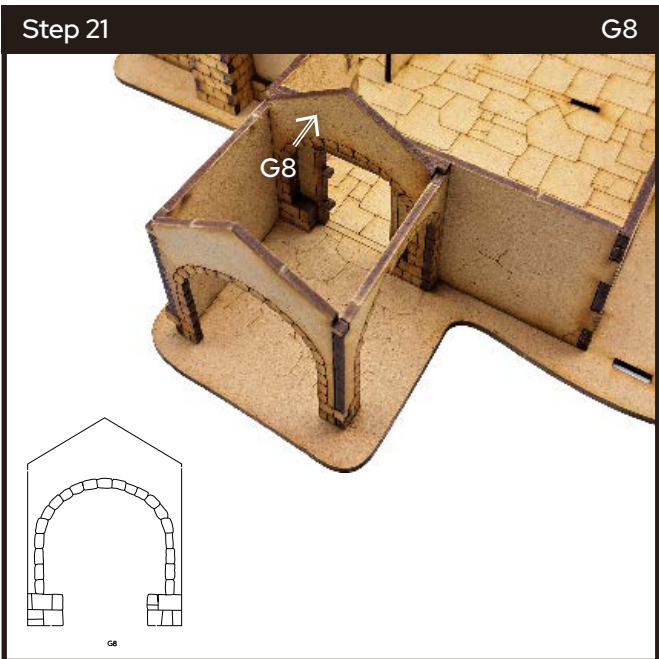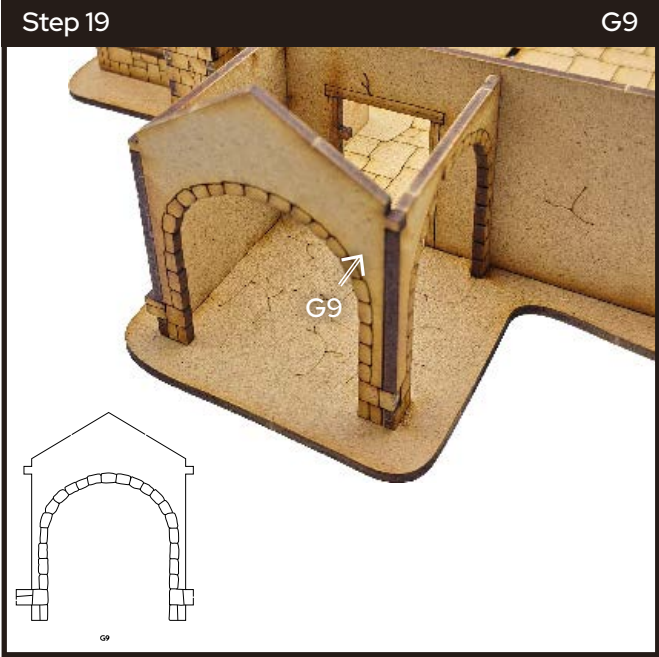

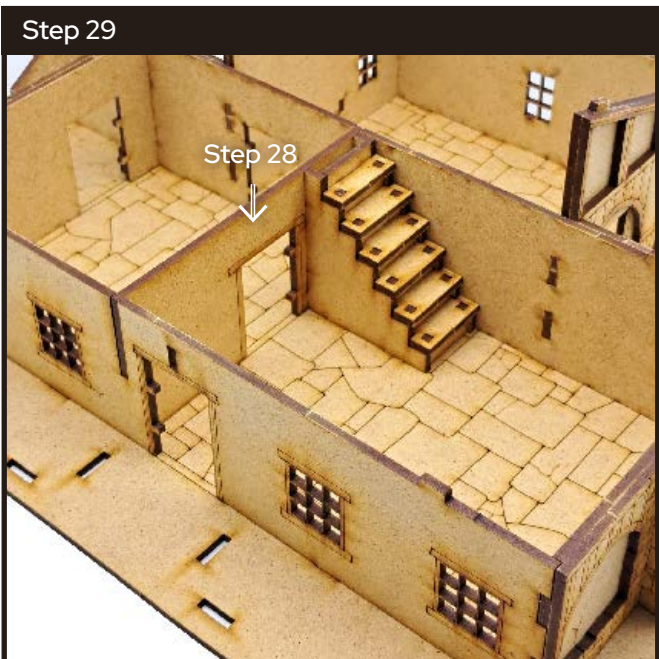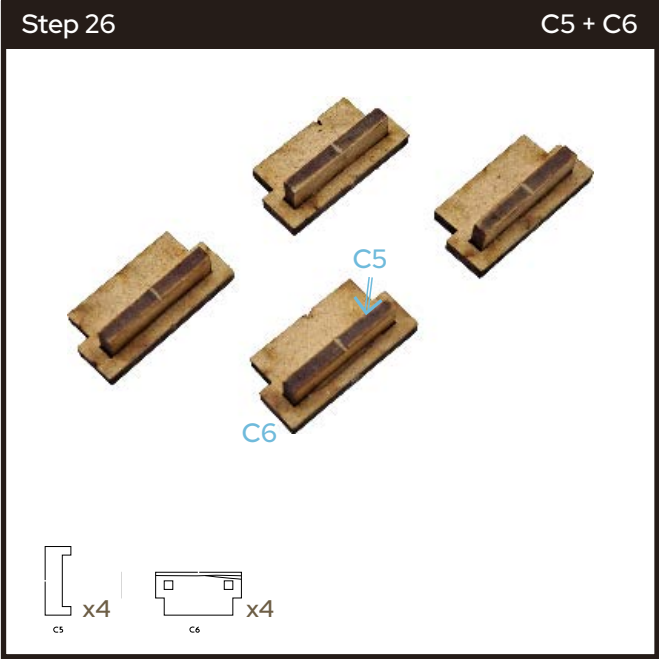

Step 31 C13 + C16

← C16

← C13

C13 C16

Step 32 D1

D1

D1

Step 33 D2 + D3

D2

D3

D2

D2 x2 D3

Step 34 C15

C15

C15

Step 35 A3 + A4

A4

A3

A4

A3

A3 A4

Step 36 A2


A2

A2

A2


Step 37

A5 + A6 + A7

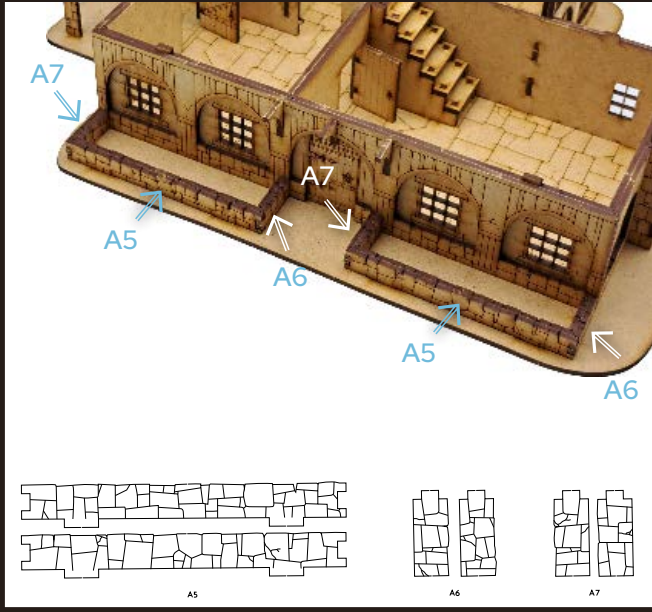


Step 38

C14

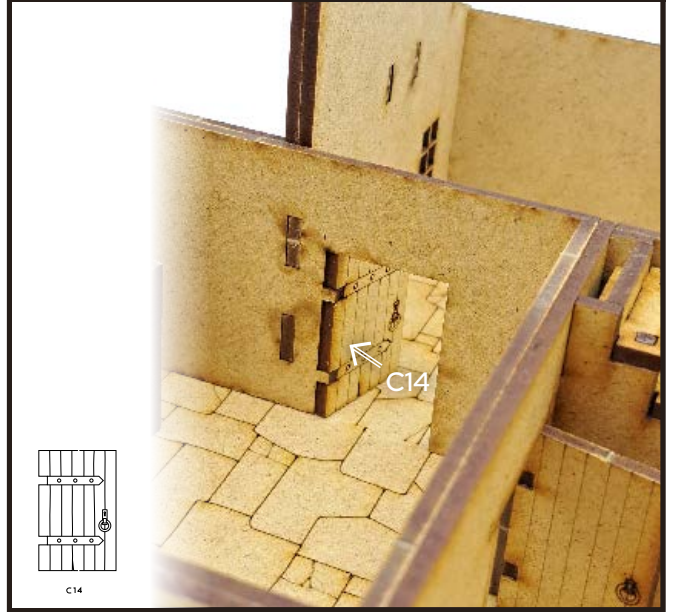


Step 39

F1 + F2 + F3

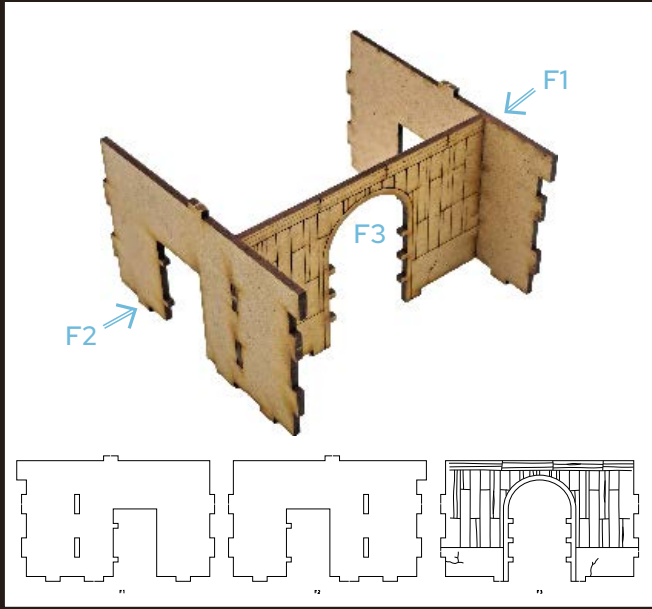


Step 40

E1 + E3 + Step 39

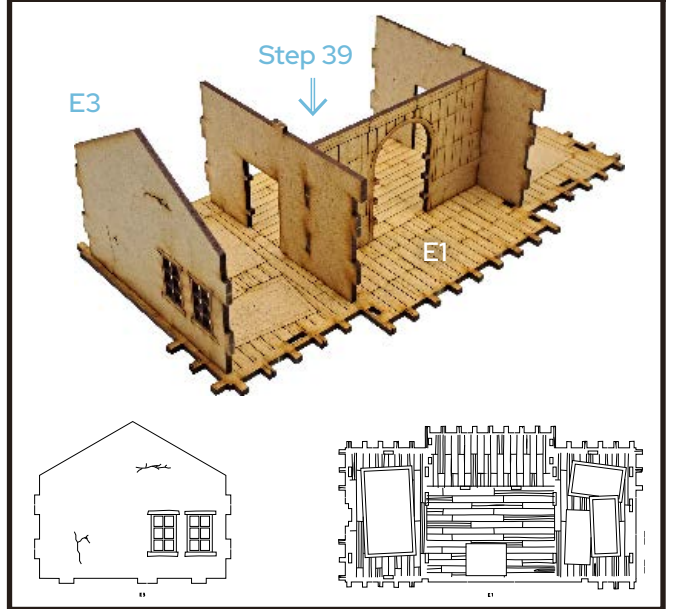


Step 41

E4

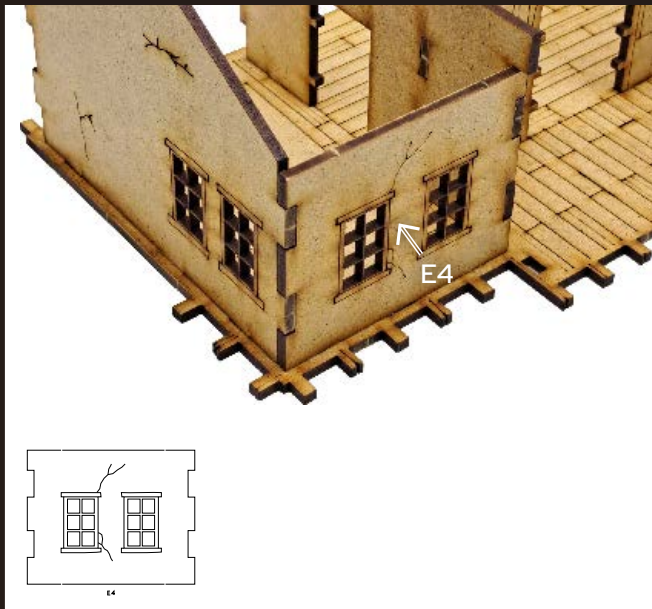


Step 42


D19 + D20

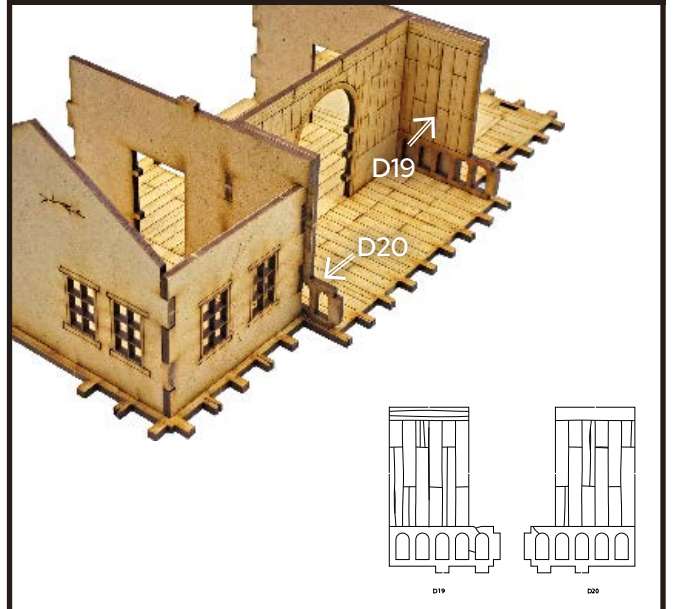


Step 43 E6

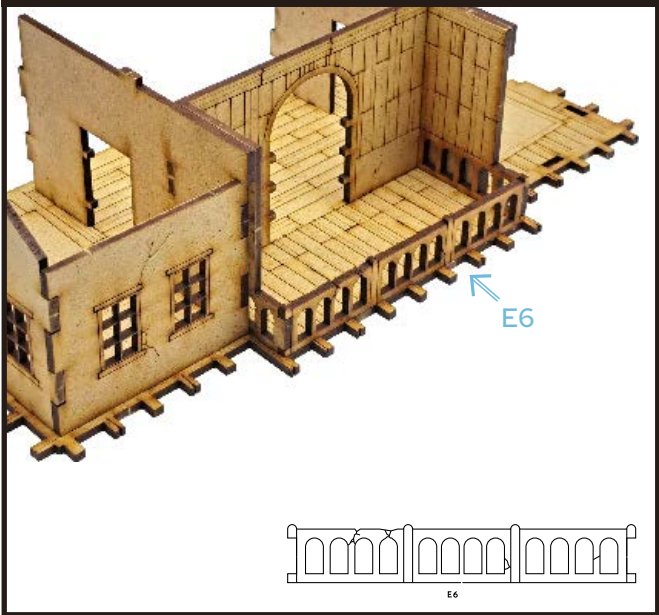


Step 44 F5 + F6

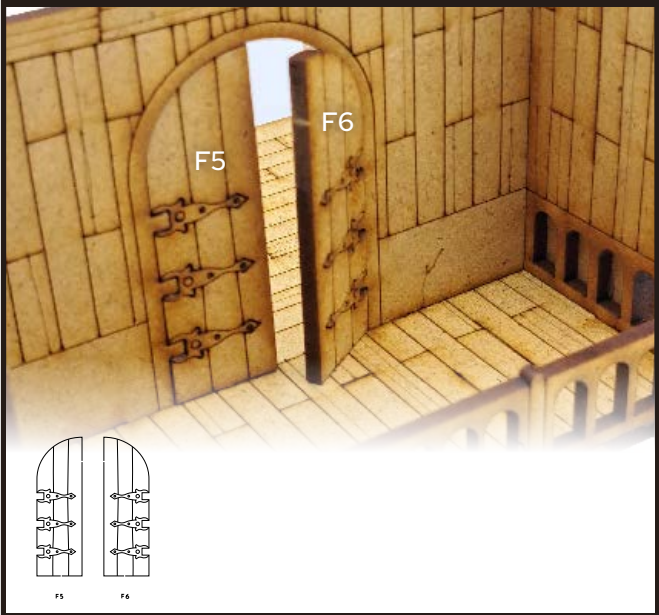


Step 45 E2

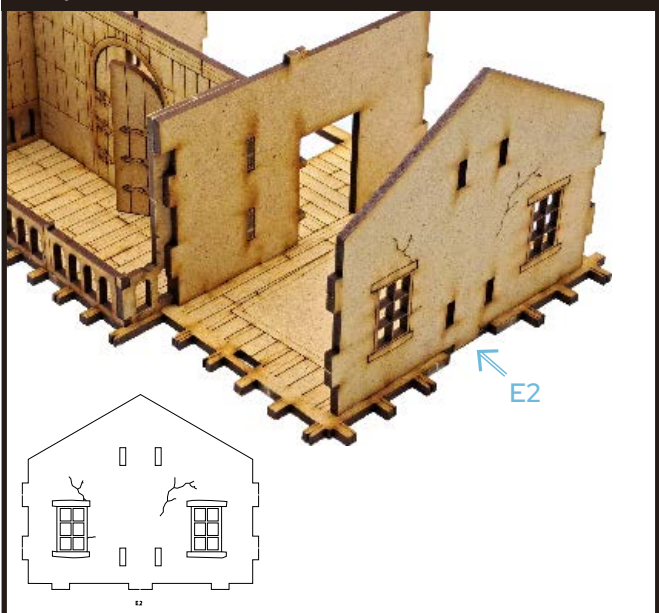


Step 46 E5

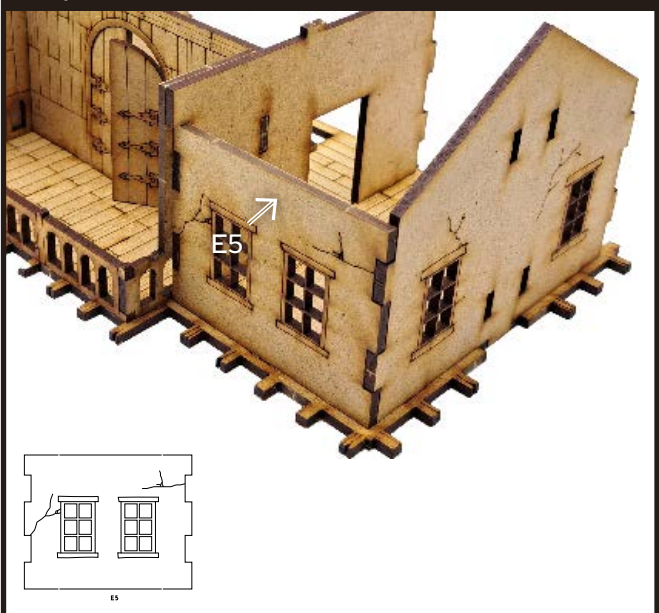

Step 47 E7 + E8

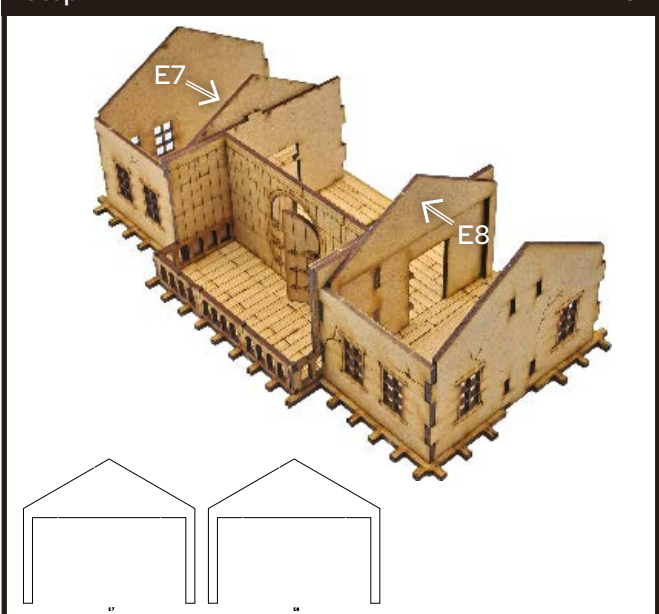


Step 48 D9 + D10

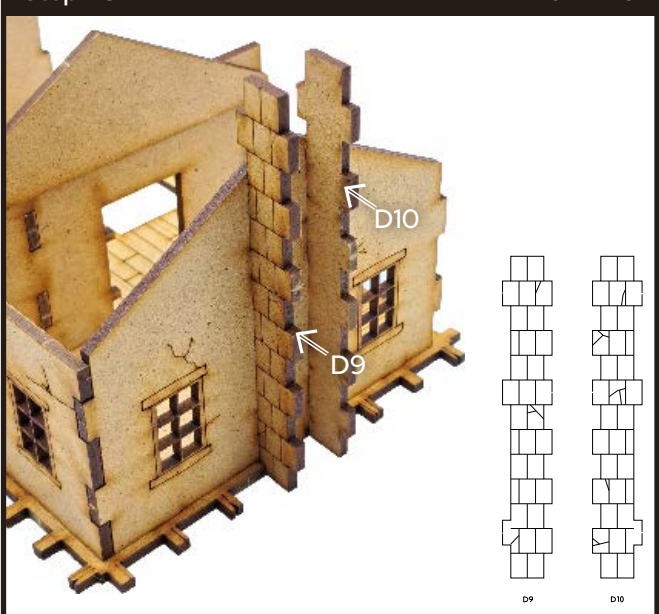


Step 49

D12

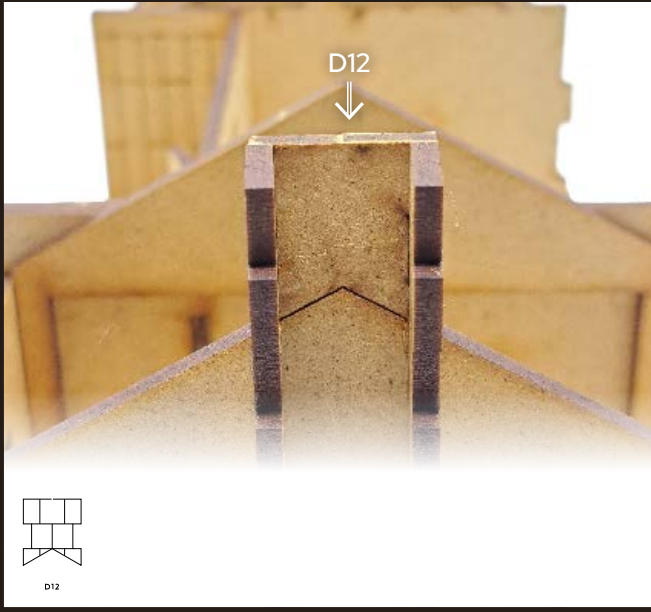


Step 50

D11

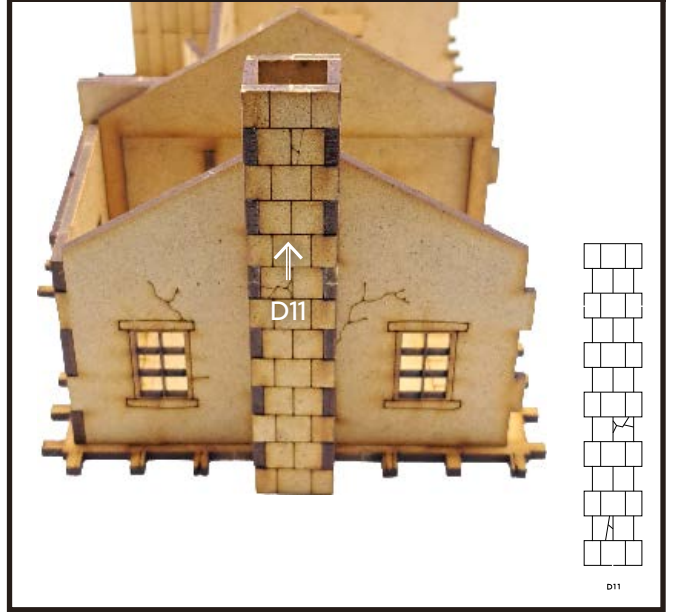


Step 51

D13

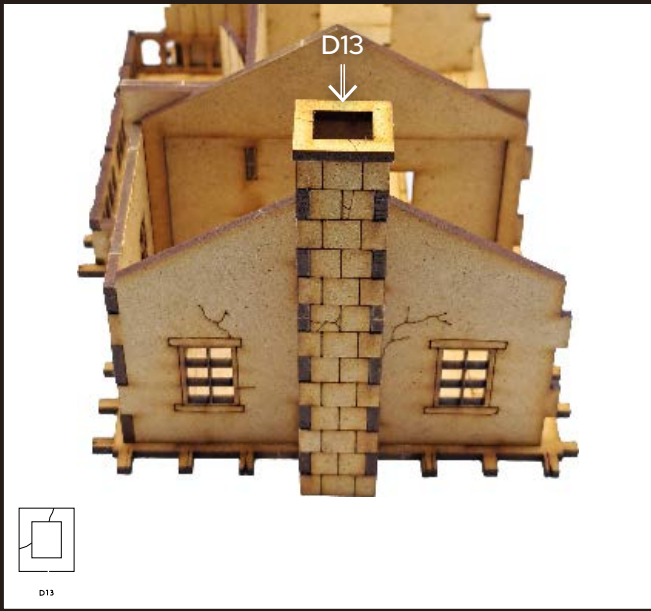


Step 52

F2

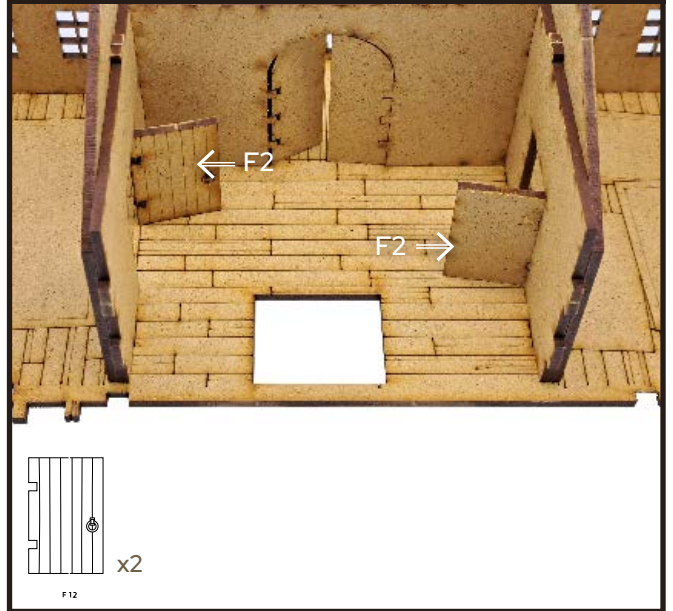


Step 53

F4

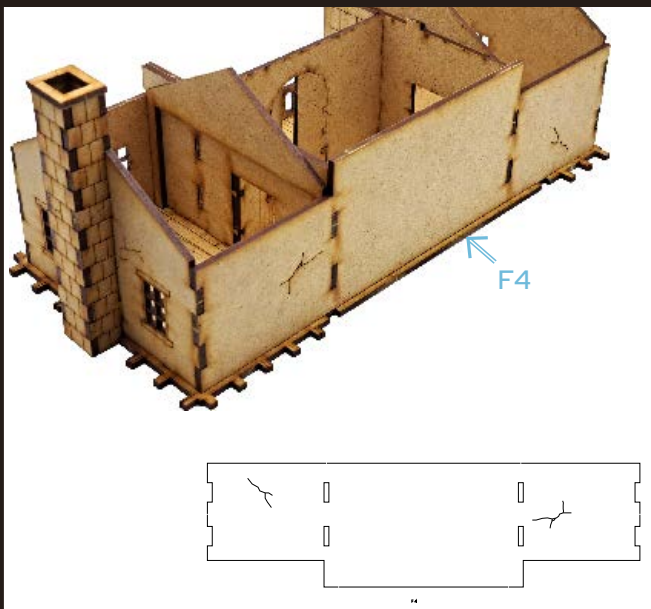


Step 54

D15 + D16

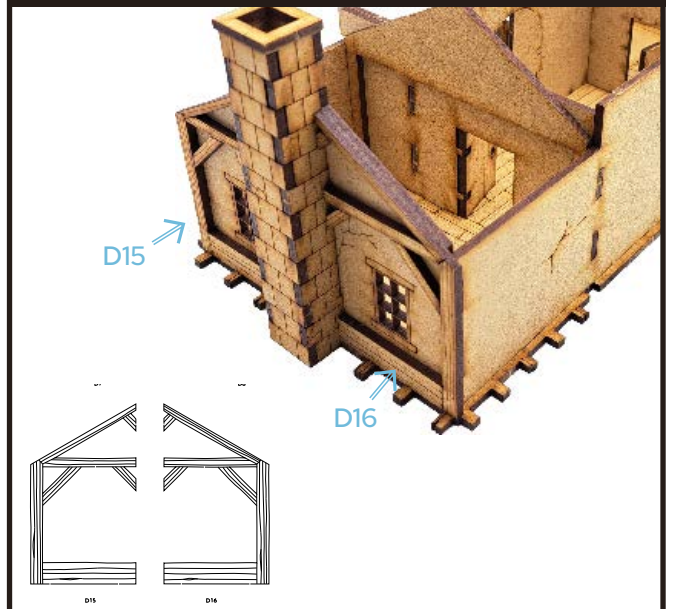


Step 55

F11

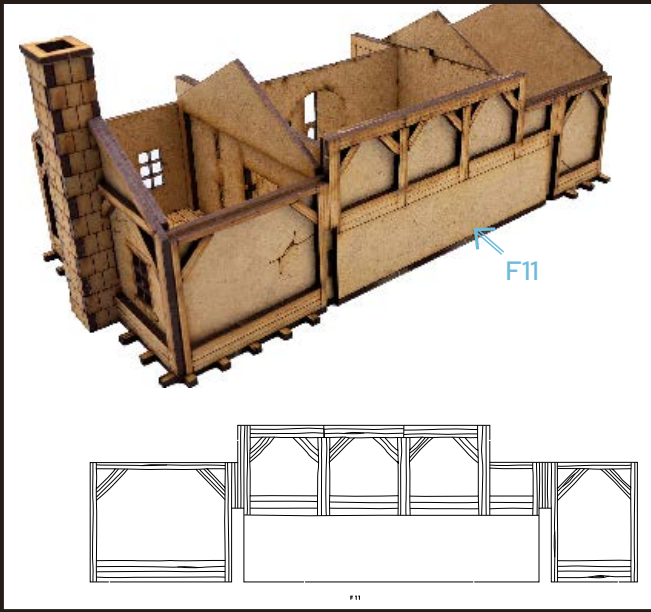


Step 56

D17

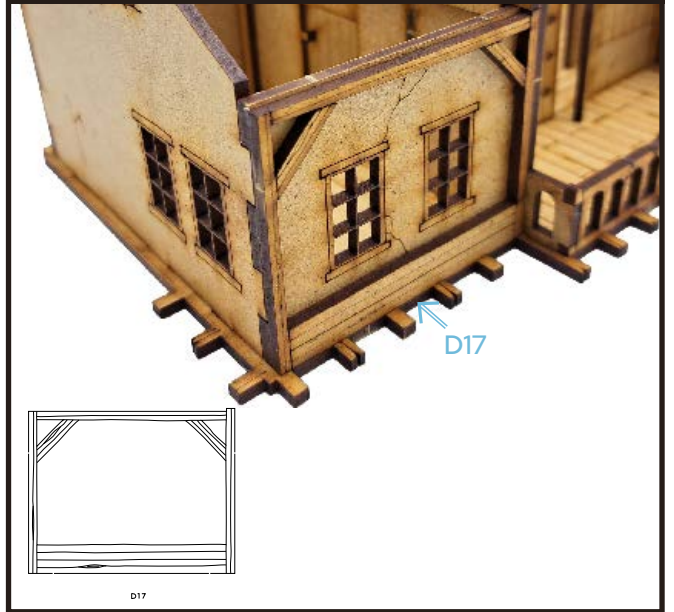


Step 57

D18

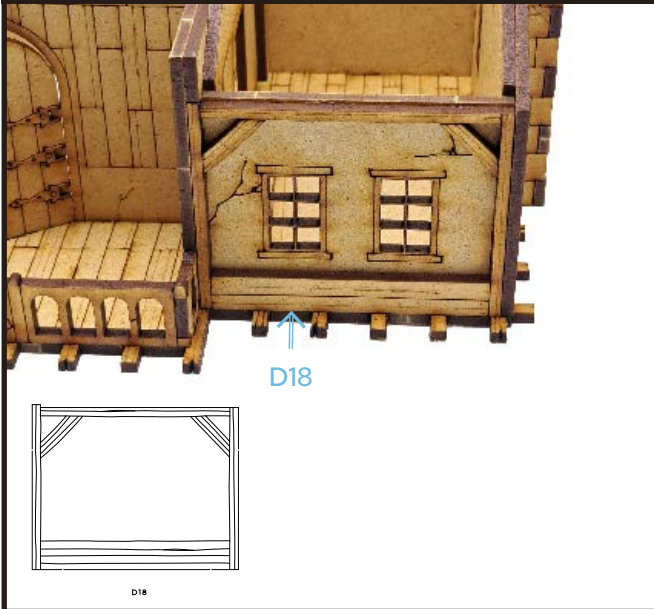


Step 58

D14

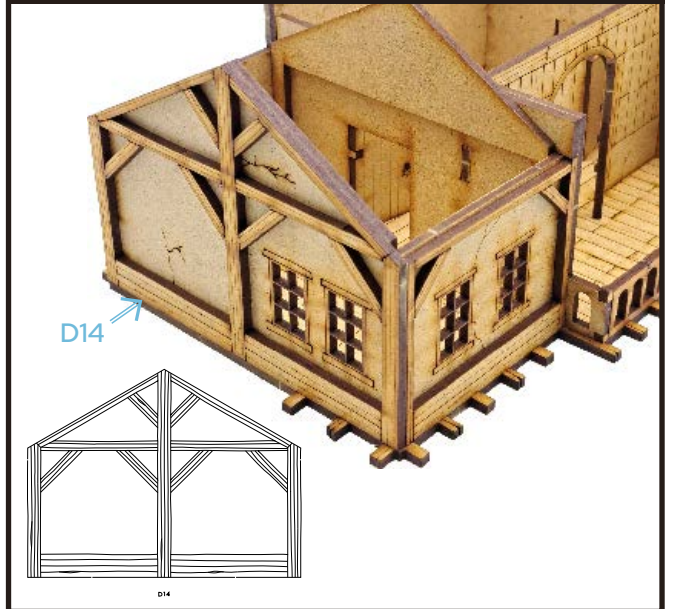

Step 59

F7 + F8

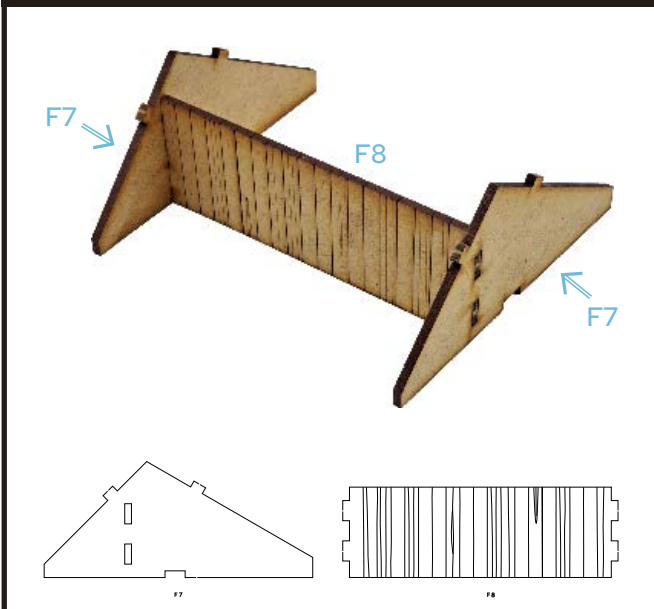

Step 60

F9

